



## Universal Remote Control (MYA) 4MOD

Model No: MYA (4MOD 1422)



**NEW  
MODEL!**

1. BLANK/ BLUE SCREEN:  
Use TV remote control to  
change the A/V Source OR  
check and secure ALL  
connections between TV and  
Digibox.
  2. NO SIGNAL (E48):  
Check cable connection to  
Digibox.
  3. MISSING CHANNEL:  
Press CH SCAN on remote
- For Digibox problem - Please  
visit [www.mysky.com.ph](http://www.mysky.com.ph)

# 1 Via Simple Set Procedure for TV Pairing




When operating the remote control, point it at the TV device being controlled.

1. Make sure your **TV device is switched on** (not in standby).
2. Press and hold the **TV POWER** and **MUTE** keys until LED indicator blinks off and TV POWER indicator remains continuously on.
3. Press and release the **FAV** button. TV Power LED indicator blinks off then remains on.
4. **Press and hold one of the Digits 0-9**, refer to table in right. The TV Power LED blinks once when entered then blinks off once code is accepted.

MYA 4MOD 1422 TV CODES	
TV Brand	CODE#
Samsung	1
LG	2
Sony	3
TCL	4
Hisense	5
Sharp	6
Philips	7
Panasonic	8
Toshiba	9
Haier	0

## 2 Via Learning Function for TV

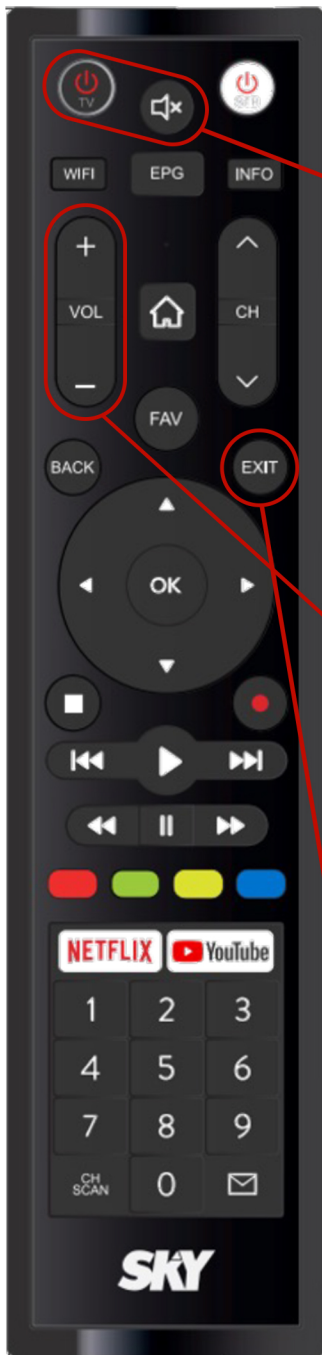

The code learning function allows this remote control to learn and store the button commands from an original remote control to buttons under TV Mode.

1. Position your original TV remote pointing towards the IR LED on front of the MYA remote control. Keep the distance apart to about 25mm.

2. Press and hold both the MYA **TV POWER** and **MUTE** buttons for approx. 3sec until LED indicator is continuously on.

3. Enter the 4-Digit Code 8>7>0>0. The LED indicator blinks off for each button press.

4. Press and release the button of MYA Universal Remote Control corresponding to the buttons of the TV remote control to learn. Learning buttons are **TV POWER**, **MUTE**, **VOL+** and / **VOL -**

5. Press and hold TV remote button until the MYA LED indicator blinks off ( wait for 2 or 3 seconds to complete). If there is a problem with the learning procedure, the LED indicator will flash for three seconds but will remain in the learning setup; please repeat from step 5 in this case.

6. Repeat steps 4 and 5 for other remote buttons to be learned and stored.

7. When all desired TV remote commands are learned, press and release the **EXIT** button. The LED turns off.

Note: VOL+, VOL- and MUTE must still be enabled for TV using the "Volume Lock to TV Mode" feature.

## MYA-4MOD1422 Volume Lock to TV Mode



By default, the volume and mute buttons control the STB. To modify and use for TV, refer to the procedure below:

1. Press and hold the **TV OR STB POWER** and **MUTE** keys for approx. 3 sec or until a LED indicator blinks off then remains continuously on.
2. Release the TV or STB Power and Mute buttons. A power LED indicator will remain on.
3. Enter 4 digit code 8 > 1 > 0 > 0

### 3 Via Direct Code Entry

When operating the remote control, point it at the TV device being controlled.

1. Make sure your **TV device is switched on** (not in standby).
2. Press and hold the **TV POWER** and **MUTE** keys until LED indicator blinks off and TV POWER indicator remains continuously on.
3. Press and release the **FAV** button. TV Power LED indicator blinks off then remains on.
4. Enter the 4-digit code corresponding to the brand of your TV device, refer to the **TV Codes List**. The TV Power LED indicator blinks off each time a button is pressed.
5. When code is entered correctly, The TV Power LED turns-off after the last digit has been entered.

If the RCU, does not respond as expected, repeat the programming by using other codes.

## MYA-4MOD1422 Reset to Factory Settings



1. Press and hold the **TV OR STB POWER** and **MUTE** keys for approx. 3 sec or until a LED indicator blinks off then remains continuously on.
2. Release the TV or STB Power and Mute buttons
3. Enter 4 digit code 8 > 8 > 9 > 9

## Simple Set Procedure for Set Top Box



1. Press and hold the **STB POWER** and **MUTE** keys until a LED indicator blinks off then STB POWER indicator remains continuously on.
2. Enter the **4-digit code** corresponding to the **STB device** (from the code list). The LED indicator blinks off each time you press a button.
3. If the code is entered correctly, the STB Power LED indicator turns off after the last digit has been entered.
4. If an invalid code is entered, the LED indicator will flash for three seconds before turning off. Recheck the selected Mode and Code and repeat the programming from Step 1.

## STB Code Set

STB	CODE SET
Coship SD: CDVBC5120AC	2003
Coship SD: CDVBC5120E	
Coship SD: N5166	
Coship SD: N5166C	
Coship SD: N5266	
Coship SD: N5266C	
Coship SD: N8770C-V	2004
Coship SD: N8770C-I	
Coship HD: CDVBC8750	2005
Handan HD: CYO-8000HD PVR	2006
Skyworth SD: C7600R-Compact	2007
Skyworth HD: HCDL7670	
Skyworth HD: HCBS / HCM152 / HCM162 / HCM151 / HCMV161 / SCM153	2008
ADTH HD: IC7600 / IC8000	2009
Skyworth: YCBV165	2013
OVT: OHCM162	2010
Inspur: MR100	2002
Skyworth MR600 / MR610 / MR615	2001
Skyworth SA100 (EVO)	2000

## MYA-4MOD1422 Pairing with TV



### Digibox Brand Type

	DIGIBOX BRAND TYPE	CODE SET	MODEL NOS
	Coship SD	2003	N5166, N5166C N5266, N5266C
	Coship HD	2005	N8770C-V N8770C-I
	Coship HD	2004	CDVBC8750
	Skyworth SD /HD	2007	C7600-R HC DL7670
	Skyworth HD	2008	HCBS HD HCMV151 HCM1152 HCMV161 HCM1162 SCM1153

## MYA-4MOD1422 Pairing with TV



### Digibox Brand Type

	DIGIBOX BRAND TYPE	CODE SET	MODEL NOS
	Skyworth SOD	2013	YCBV165
	ADTH SOD	2009	IC7600 IC8000 v1 IC8000 v2
	OVT HD	2012	OHCM162
	MIRAE	2002	MR100

## MYA-4MOD1422 Pairing with TV



### Digibox Brand Type

	DIGIBOX BRAND TYPE	CODE SET	MODEL NOS
	Mirae Lite & All-in Box	2001	MR600 MR610 MR615
	Skyworth Evo	2000	SA100